RYOBI

OWA1800

RYOBI

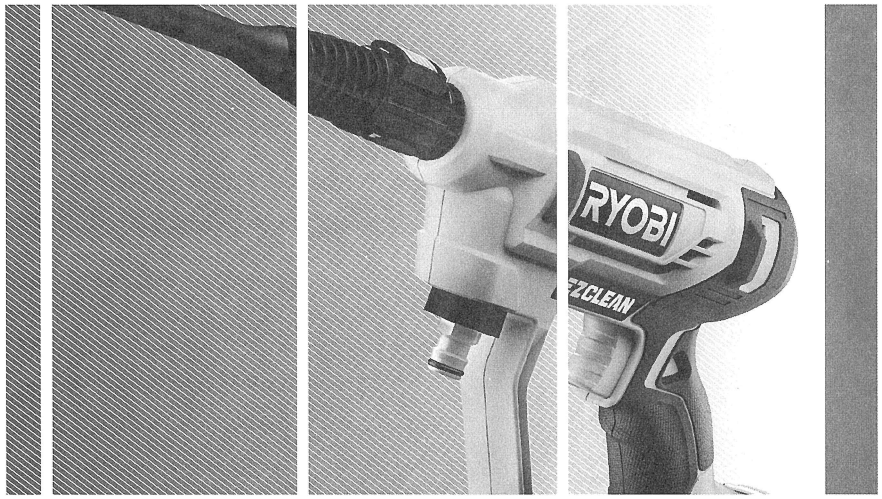

OWA1800

ADDENDUM

2

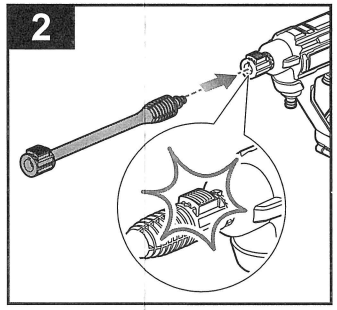

Insert the end of the extension wand into the power washer assembly and push until it clicks into place.

9

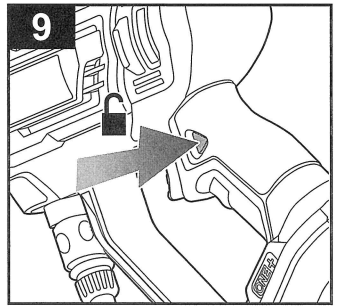

Press the lock-out button.

INTENDED USE

⚠ WARNING! The product is designed for use with clean water. The use of other cleaning agents or chemicals may adversely affect the safety of the product.

GENERAL SAFETY WARNINGS

⚠ CAUTION! The product must not be used on a drinking water supply. Do not connect the product to the public drinking water network.

SYMBOLS ON THE PRODUCT

The product is not suitable for connection to the drinking water supply.

PRODUCT SPECIFICATIONS

Rated flow	182 L/hr

BATTERY AND CHARGER

Model	OWA1800
Battery pack	-
Charger	-
Compatible battery packs	RB18L15, RB18L15A, RB18L15B, RB18L20, RB18L20A, RB18L25, RB18L25A, RB18L40, RB18L40A, RB18L50, RB18L50A, RB18L13, RB18L60A, RB18L90A
Compatible chargers	RC18150U, BCL14181H, BCL14183H, RC18120, RC18627U, BCS618G